


**Low Expansion Spray foam/Fire Rate Polyurethane Caulking**  
*(Seal any gaps between framing and Insulation with low expansion spray foam. For gaps Less than 6mm Use Fire Rated Polyurethane Caulking)*

**Foilboard Superior 40 Rigid Insulation**  
*(Rigid Insulation Adhered to Back of Lintel with Low expansion Foam)*

**Brick Veneer Note**  
*(Fire Rated Caulking Between Jack Stud and Window SubFrame Junction. Joint Taped With Kingspan Insulation Tape)*

**Window Frame to Rough Opening Sealing**  
*(Joint Filled with backer rod, then sealed with Fire Rated Polyurethane Caulking)*

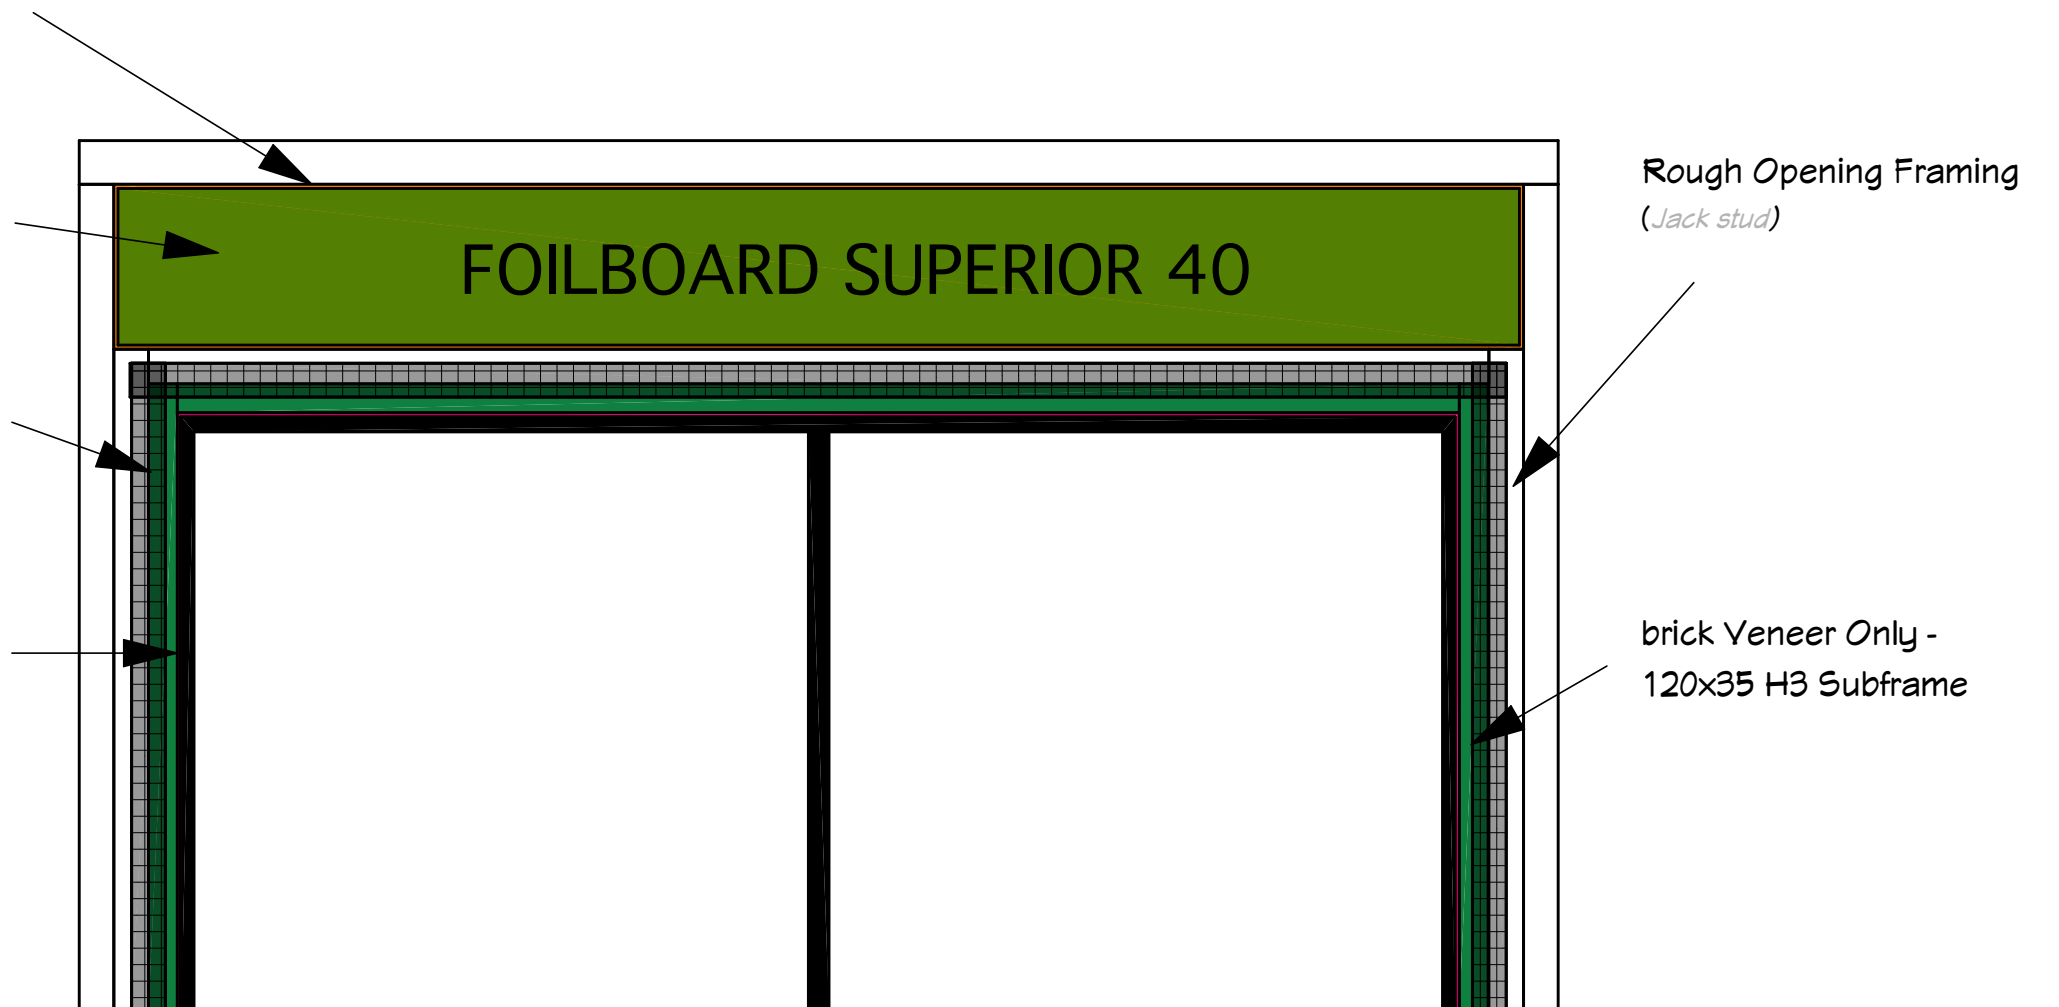

**Window/Door Opening Air sealing and Insulation Best Practice**  
*(Internal View)*